

Wireless Speaker

Reference Guide
Справочник
Довідковий посібник
Анкетама нұсқалыбы

SRS-XB21

©2018 Sony Corporation
Printed in China
http://www.sony.net/




* 4 7 3 4 0 3 7 6 1 * (1)

English Wireless Speaker

Before operating the system, please read this guide thoroughly and retain it for future reference.

WARNING
To reduce the risk of fire, do not cover the ventilation opening of the appliance with newspapers, tablecloths, curtains, etc. Do not expose the appliance to naked flame sources (for example, lighted candles).
Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.
Do not expose the batteries (battery pack or batteries installed) to excessive heat such as sunshine, fire or the like for a long time.
If your skin touches this product for a long time when the power is on, it may cause a low temperature injury.

CAUTION
You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

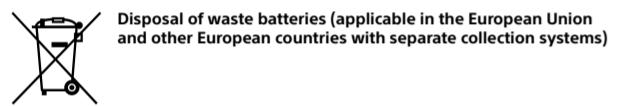

Do not dismantle, open or shred secondary cells or batteries. In the event of a cell leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice. Do not use a cell or battery which is not designed for use with the equipment. Secondary cells and batteries need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the cells or batteries several times to obtain maximum performance. Dispose of properly.

Transportation should be performed in the original packaging of the manufacturer. During transport do not drop, do not throw, not to excessive vibration.
In case of malfunction couldn't be fixed by this document – please contact your nearest SONY service center.

Precautions

On safety

The nameplate and important information concerning safety are located inside of the cap on the rear side of the system.

About micro-USB cables

To charge, use a micro-USB cable and connect the system to:
– an AC outlet by using a commercially-available USB AC adaptor (5 V, at least 0.5 A),
– a USB port of a computer.

Make sure to use the following supplied micro-USB cable.



On placement
• Do not set the system in an inclined position.
• Do not leave the system in a location near heat sources, or in a place subject to direct sunlight, excessive dust, or mechanical shock.
• Do not use or leave the system in a car.
• Do not use the system in a sauna.

About the Party Booster function

When using the Party Booster function, notice the following. If the system hits a person or thing, it may cause a malfunction.
• Disconnect the cables and close the cap when using the system.
• Do not use the function if you are driving.
• When using the function, hold firmly and do not shake the system violently so that you do not throw or drop the system from your hand.
• Before using the function, make sure that you have secured sufficient space around the system.
• Do not hit the system with a tool.
• Do not use the function while you are driving or walking.
• Keep 20 cm or more away from the face and eyes while in use.
• Avoid using the function for a long time. Take breaks regularly.
• When using the function, if you get tired, feel uncomfortable or experience pain somewhere in your body, stop using the function immediately.



Others
• Do not use or leave the system in an extremely cold or hot environment (temperature outside the range of 5 °C – 35 °C). If the system is used or left in outside the above range, the system may automatically stop to protect internal circuitry.
• At high temperature, the charging may stop or the volume may reduce to protect the battery.
• Even if you do not intend to use the system for a long time, charge the battery to its full capacity once every 6 months to maintain its performance.

About the Voice Guidance

IMPORTANT: THE SOUND GUIDANCE IS AVAILABLE IN THIS PRODUCT ONLY IN ENGLISH
Depending on the status of the system, the voice guidance outputs from the speaker as follows.
• When setting the system to the pairing mode: "Bluetooth pairing"
• When pressing the BATT (battery) button to check the battery power during the system is turned on: "Battery fully charged/Battery about 70%/Battery about 20%/Please charge"
• When the battery power is low: "Please charge"
• When the settings are completed for the Speaker Add function; "Double mode"
• When pressing and holding the ADD (Speaker Add) button during the Speaker Add function; "Left/Right/Double mode"

On Copyrights
• Android, Google Play and other related marks and logos are trademarks of Google LLC.
• LDAC™ and LDAC logo are trademarks of Sony Corporation.
• The BLUETOOTH® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and tradenames are those of their respective owners.
• The N Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.

• iPhone, iPod touch, and Siri are trademarks of Apple Inc., registered in the U.S. and other countries.
"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.
App Store is a service mark of Apple Inc.

• WALKMAN and WALKMAN logo are registered trademarks of Sony Corporation.
• Other trademarks and trade names are those of their respective owners.
• ™ and ® marks are omitted in the documents.

Notes on waterproof and dust proof features (Read before using the system)

Waterproof and dust proof performance of the system

The system, with the cap fastened securely, has a waterproof specification of IPX7¹ as specified in "Degree of protection against water immersion" of IEC60529 "Ingress Protection Rating (IP Code)"², and a dust proof specification of IP6X² as specified in "Degrees of protection against solid foreign objects"³.

Liquids that the waterproof performance specifications apply to

Applicable:	fresh water, tap water, pool water, sea water
Not applicable:	liquids other than the above (soapy water, water with detergent or bath agents, shampoo, hot water, etc.)

¹ IPX7 (Degree of protection against water immersion): For details, refer to the Help Guide.

² IP6X (Degrees of protection against dust): For details, refer to the Help Guide.

³ The supplied accessory is not waterproof or dust proof.


The waterproof and dust proof performance of the system is based on our measurements under the conditions herein described. Note that malfunctions as a result of water immersion or dust intrusion caused by misuse by the customer are not covered by the warranty.

To avoid deterioration of waterproof and dust proof performance

Check the following and use the system correctly.
• The system passes the drop test from 1.22 m on plywood of 5 cm thickness conforming to MIL-STD 810 F Method 516.5-Shock. However, this does not guarantee no damage, no breakdown, or waterproof and dust proof performance in all conditions. Deformation or damage from dropping the system or subjecting it to mechanical shock may cause deterioration of the waterproof and dust proof performance.

• Do not use the system in a location where large amounts of water or hot water may splash on it. The system does not have a design that is resistant to water pressure. Use of the system in a location where high water pressure is applied, such as under running water or in the shower, may cause a malfunction.

• Do not pour high-temperature water or blow hot air from a hair dryer or any other appliance on the system directly. Also, never use the system in high temperature locations such as in saunas or near a stove.
• Handle the cap with care. The cap plays a very important role in maintenance of the waterproof and dust proof performance. When using the system, make sure that the cap is closed completely. When closing the cap, be careful not to allow foreign objects inside. If the cap is not closed completely the waterproof and dust proof performance may deteriorate and may cause a malfunction of the system as a result of water or dust particles entering the system.

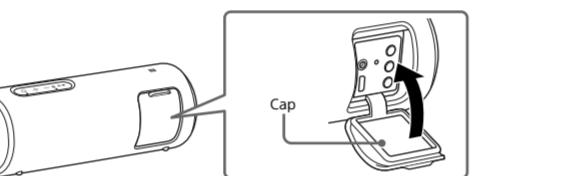

How to care for the system

Although the fabric part of the system has water repellent treatment applied, you can use the system more comfortably and for a longer period of time by following the maintenance procedure below.

• If the surface of the system gets dirty in the following cases, wash the system with fresh water (tap water, etc.) promptly to remove the dirt. Leaving dirt on its surface may cause the fabric part to discolor or deteriorate, or the system to malfunction.

Ex.
– When salt, sand, etc. is stuck on the system after using it on a beach, pool side, etc.
– When the system is stained with foreign substances (sunscreen, suntan oil, etc.)

• If the system gets wet, wipe off the moisture using a dry soft cloth immediately. In addition, dry the system in an airy place until no moisture remains.

• The sound quality may change when water enters the speaker section of the system. It is not malfunction. Wipe off the moisture on its surface, and put the system on a dry soft cloth with the SONY logo facing down to drain the collected water inside the system. Then, dry the system in an airy place until no moisture remains.

Note
• If the surface of the system gets dirty, do not use detergent, thinner, benzine, alcohol, etc. to clean the system because it will affect the water repellent function of the fabric part of the system.

• Especially in cold regions, be sure to wipe off the moisture after using the system. Leaving moisture on its surface may cause the system to freeze and malfunction.

• Do not place the system directly on sand, such as in a sandbox or on a sandy beach. If sand grains, etc. enter the fabric part of the system, remove them carefully. Never use a vacuum cleaner, etc. on the system. It may cause damage of the speaker unit.

Dimensions (including projecting parts and controls)

Approx. 193 mm × 72 mm × 65 mm (w/h/d)

Mass Approx. 530 g including battery

Package Contents Main unit (1)
Micro-USB cable (1)

* When a specified music source is used, the volume level of the system is set to 25, the sound mode is set to STANDARD, and the illumination is turned off.
Time may vary, depending on the temperature or conditions of use.

System requirements for charging battery using USB

Using a commercially-available USB AC adaptor capable of feeding in 1.5 A or 500 mA (the charging time will be shorter with a USB AC adaptor capable of feeding in 1.5 A).

Compatible iPhone/iPod model

Bluetooth technology works with iPhone 8 Plus, iPhone 8, iPhone 7 Plus, iPhone 7, iPhone SE, iPhone 6s Plus, iPhone 6s, iPhone 6 Plus, iPhone 6, iPhone 5s, iPhone 5c, iPhone 4s, iPod touch (6th generation), iPod touch (5th generation).

Note

Sony cannot accept responsibility in the event that data recorded to iPhone/iPod is lost or damaged when using your iPhone/iPod connected to this system.

Design and specifications are subject to change without notice.

Русский

Беспроводной динамик

Перед использованием системы внимательно прочтите данное руководство и храните его под рукой на случай, если оно понадобится.

О функции Усилитель Party

При запуске функции Усилитель Party обратите внимание на следующее. Удар системы о человека или предмет может привести к неисправности.

- Отключите кабели и закройте колпачок при использовании системы.
- Не используйте с подключенным адаптером.
- При использовании функции треко держите систему и не трягите ее слишком сильно, чтобы система не выпала из рук.
- Перед использованием функции убедитесь, что вокруг системы достаточно свободного места.
- Не ударяйте систему инструментами.
- Не используйте функцию во время вождения или ходьбы.
- Во время использования держите устройство на расстоянии 20 см или более от лица и глаз.
- Не используйте функцию в течение длительного времени.
- Регулярно делайте перерывы в использовании.
- Если при использовании функции вы чувствуете усталость, дискомфорт или боль в теле, немедленно прекратите использование функции.

Чистка

• Не используйте для очистки корпуса спирт, бензин или растворитель.

Прочее

• Не используйте и не оставляйте систему при экстремально низких или высоких температурах ниже 5 °C и выше 35 °C. При использовании системы в указанном температурном диапазоне система может автоматически прекратить работу для защиты электронных схем.

• При высокой температуре зарядка может остановиться или громкость уменьшиться для защиты батареи.

• Даже если вы не планируете использовать систему в течение длительного времени, зарядите батарею полностью каждые 6 месяцев для поддержания эффективности ее работы.

О голосовых указаниях

ВАЖНО! ЗВУКОВЫЕ УКАЗАНИЯ В ЭТОМ ПРОДУКТЕ ДОСТУПНЫ ТОЛЬКО НА АНГЛИЙСКОМ ЯЗЫКЕ

В зависимости от состояния системы динамик выдает следующие голосовые указания.

- При переходе системы в режим сознания пары "Bluetooth pairing" (Сопряжение Bluetooth)
- При нажатии кнопки BATT (батарея) для проверки заряда батареи, когда система включена "Battery fully charged/Battery about 70% /Battery about 20% /Please charge" (Батарея полностью заряжена/Батарея заряжена на 70% /Батарея заряжена на 20% /Пожалуйста зарядите батарею)
- При полной зарядке батареи "Battery 100%" (Батарея заряжена на 100%)
- При нажатии кнопки ADD (Добавление динамика) "Please charge" (Пожалуйста зарядите)
- При завершении настройки добавления динамика, "Double mode" (Двойной режим)
- При нажатии и удерживании кнопки ADD (Добавление динамика) "Left/Right/Double mode" (Влево/Вправо/Двойной режим)

Защита авторского права и лицензии

- Android, Google Play и другие соответствующие марки и логотипы являются товарными знаками Google LLC.
- LDAC™ и логотип LDAC являются зарегистрированными товарными знаками Sony Corporation.

• Словесный знак и логотип BLUETOOTH® являются зарегистрированными товарными знаками Bluetooth SIG, Inc., и любое использование таких знаков осуществляется Sony Corporation в соответствии с лицензией. Прочие товарные знаки и торговое название принадлежат соответствующим владельцам.

• Отметка NFC является торговой маркой или зарегистрированной торговой маркой NFC Forum, Inc. в США и других странах.

• iPhone, iPod touch и Siri являются товарными знаками Apple Inc., зарегистрированными в США и других странах.

"Made for iPod" и "Made for iPhone" означает, что электронное устройство было разработано специально для подключения к iPod или iPhone соответственно и было сертифицировано разработчиком как соответствующие техническим стандартам Apple. Компания Apple не несет ответственность за работу этого устройства и его соответствие стандартам безопасности и регулятивным нормам. Обратите внимание, что использование данного аксессуара с iPod или iPhone может повлиять на работу беспроводного соединения. App Store является знаком обслуживания Apple Inc.

• WALKMAN и логотип WALKMAN являются зарегистрированными товарными знаками Sony Corporation.

• Другие товарные знаки и торговые названия являются товарными знаками и торговыми названиями их соответствующих владельцев.

• Отметки ™ и ® не используются в документации.

ПРИМЕЧАНИЯ О ВОДОНЕПРОНИЦАЕМОСТИ И ПЫЛЕЗАЩИТЕ (Прочтите перед использованием)

Использование элементов питания и отслужившего электрического и электронного оборудования (Директива о разделительном сборе отходов)

Условия хранения:

Хранить в упакованном виде в темных, сухих, чистых, вентилируемых помещениях, изолированных от источников тепла и щелочей.

Хранить при температуре от -20 °C до +60 °C и относительной влажности не более <80%, без образования конденсата. Срок хранения не установлен.

Транспортировать в оригинальной упаковке, во время транспортировки не бросать, оберегать от падений, ударов, подвергать излишней вибрации.

Если неисправность не удается устранить следуя данной инструкции – обратитесь в ближайший авторизованный SONY центр по ремонту и обслуживанию.

Импортер на территории стран Таможенного союза

АО «Сони Электроникс», Россия, 123103, Москва, Караваевский проезд, 6

Организация, уполномоченная принимать претензии от потребителей на территории Казахстана: АО «Сони Электроникс» Представительство в Казахстане, 05

