



# XS WIRELESS 1

**Quick Guide** | Kurzanleitung | Guide rapide | Guida rapida | Guía de inicio rápido | Guia rápido | Beknopte handleiding | Krótka instrukcja obsługi | Snabbguide | Kort vejledning | Pikaohje | Γρήγορος οδηγός | Kısa Kılavuz | Краткая инструкция | 快速指南 | 快速使用指南 | クイックガイド | 요약 설명서

In the box	Vocal Sets		Instrument Sets		Lavalier Set	Headmic Set
	XSW 1-825	XSW 1-835	XSW 1-C11	XSW 1-908	XSW 1-ME2	XSW 1-ME3
XS WIRELESS 1	•	•	•	•	•	•
EM-XSW 1	•	•	•	•	•	•
NT 12-5CW	•	•	•	•	•	•
SKM 825-XSW	•	•	•	•	•	•
MZQ 1	•	•	•	•	•	•
SKM 835-XSW	•	•	•	•	•	•
SK-XSW	•	•	•	•	•	•
e 908T	•	•	•	•	•	•
ME 2-2	•	•	•	•	•	•
ME 3-II	•	•	•	•	•	•
CI 1-N	•	•	•	•	•	•
2 x AA LR6 1.5 V	•	•	•	•	•	•

### Battery

- Slide the battery cover open.
- Insert the battery with the positive (+) and negative (-) terminals facing the correct direction.
- Slide the battery cover closed.

### Low Battery

~ 10 h  
~ 7 h  
~ 3 h  
Low Batt

### Setup

XLR-3 OR 6.3 mm

EU US UK AU CN KOR

ME 2-2 e 908T ME 3-II CI 1-N

### On/off

1s on 3s off

OR

### Display

EM-XSW 1 Bank 1...8 Channel 0...9

Sensitivity Sync Low battery

### Volume

0...9

0 1 2 3 4 5 6 7 8 9

### Mute

Audio on

Audio off

Sennheiser electronic GmbH & Co. KG

### Change frequency

**Automatically/Scan**

1. Turn the device **Off**.
2. Press **Set/Scan** for **3s**.
3. The display shows **23**.
4. Press **Set/Scan** again. A green checkmark appears.

**Manually**

Bank Channel

1. Press **Set/Scan**.
2. The display shows **13**. Press **CH+**.
3. The display shows **23**. Press **Set/Scan**.
4. Press **CH+** again.
5. Press **Set/Scan**. A green checkmark appears.

### Sync

1. Press **hold** on the microphone. The display shows **Syn**. Press **hold** on the receiver. The display shows **Syn**. A green checkmark appears.
2. Press **Set/Scan** on the receiver. The display shows **23**. Press **Syn**. A green checkmark appears.

### Sensitivity

Level

- 0 dB
- 10 dB
- 20 dB
- 30 dB

OR

### Multichannel

Bank 1...8  
Ch. 0...9

max. 10 ch.

Bank	CH.	Bank	CH.	Bank	CH.	Bank	CH.	
23	24	25	26	✓				
11	12	13	18	✓				
23	13	47	89	✗				
23	23	23	23	✗				

### ME 2-2

25 cm (10")

### ME 3-II

2...3 cm (1")

### Min. distance

> 5 m (16'5")

### SKM

### Guitar pickup

> 20 cm (8")

### Squelch

min. SQ

max. SQ

