 


hochem

**ML-01**



User Manual V1.0



**EN** 01 - 07 User Manual

---

**CN** 08 - 14 快速入门指南

---

**JP** 15 - 21 ユーザーマニュアル

---

**KR** 22 - 28 사용자 매뉴얼

---

**DE** 29 - 35 Benutzerhandbuch

---

**IT** 36 - 42 Manuale d'uso

---

**FR** 43 - 49 Manuel de l'utilisateur

---

**ES** 50 - 56 Manual del usuario

---

**RU** 57 - 63 Руководство  
пользователя

 
---

# 01 Install Magnetic Fill Light

It is not only used on the stabilizer, but also can be magnetically mounted on any iron surface and works independently.

a. Install on Gimbal (For the gimble with metal plate, eg, hohem XE)

Keep the logo "**hohem**" upwards, attach the fill light to the magnetic alignment

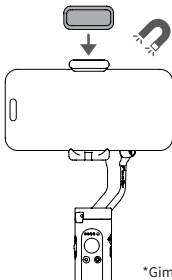

\*Gimbal Not Included


## b. Install Metal Plate

  
Stick the metal plate on a clean surface after removing the protected film, and put magnetic fill light on the metal plate.



## 02 How the Magnetic Fill Light Works

Cold Light / Warm Light / Natural White Light (10-Level Adjustable Brightness)

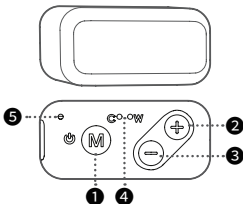



### ❶ M Button (Turn on/off fill light)

**Press and hold for 3s:** Turn on/off fill light

**Press once:** Cold/warm/natural white light switch

### ❷ Plus "+" Button

Single press to increase brightness in ten levels

### ❸ Minus "-" Button

Single press to decrease brightness in ten levels

### ❹ Fill Light Indicator

("C" is short for cold; "W" is short for warm.)

**C indicator lighting alone:** Cold light in use

**W indicator lighting alone:** Warm light in use

**C&W indicators both lighting:** Natural white light in use

### ⑤ Power Indicator

**Flashing red:** Charging

**Solid red:** Fully Charged

## 03 Specifications

---

Model ML-01

---

Weight 16g

---

Battery Capacity 3.7V / 300mAh

---

Power 1W

---

Battery Life 1 Hour

---

Lights Cold Light (6500k)  
Warm Light (3000k)  
Natural White Light (5500k)

---

## 04 Warranty Terms

1. Customers are entitled to replacement service in case of quality deficits or functional disorder found in the product within 7 days upon the purchase date. But ensure the commodity and package with no damage, and we will offer a brand new replacement after confirming the product's problem is not related to artificial damage.
2. The warranty service is subject to normal use.
3. The valid warranty period is 12 months counting from the date of selling under normal use. Accessories are excluded from the warranty service.
4. This warranty service DOES NOT cover accidental or artificial damages (including but not limited to) caused by unauthorized modification, disassembly, incorrect use and operation.
5. Please keep and offer the warranty card for claiming the warranty service.



# Warranty Card

User Name:

---

Contact No.:

---

Address:

---

Purchase Date:

---

Prod. Serial No.:

---

Failure Cause:

---

Service Record:

---

# CALL CENTER -Toll Free

## UNITED STATES:

+1(888)9658512

Mon-Fri: 9:00AM-5:00PM (EST)

---

## UNITED KINGDOM:

+44(0)808 2737578

Mon-Fri: 2:00PM-10:00PM (GMT +0)

---

## CANADA:

+1(855)758-8939

Mon-Fri: 9:00AM-5:00PM (EST)

---

## BRAZIL:

+55 (0)800 5911897

Mon-Fri: 10:00AM-6:00PM (GMT -3)